



## **PET-View Projection Foil Installation procedure**



**Optea AB®**

**Date of issue: 08-12-2010**

**DocReg Nr: 83-SM-00002-01**

**When applying projection films to Glass or Acrylic or other carrier, Please follow the instructions below.**

### **How to install PET-view projection film**

1– Spray soapy water or similar liquid such as neuter detergent on the glass and clean thoroughly so that there is no dirt or grit.

2 - Peel release liner from the film carefully and spray soapy water or something similar on the glass and the glue side.

3 - Paste the film on the glass correctly (allowing you to adjust the location of the film easily as you want by having step 2 then check that the location of the film is correct as you want.

4 – Remove soapy water between the glass and the film with squeezer or something similar carefully.

Firmly remover the air or liquid for better performance.

Make sure you give enough pressure to disperse all the liquid and air bubble.

Finally, cleanse the film and the glass with soft cloth rub well.

5 – Once removing all the liquid and air bubbles, the film is adhered to the glass.

You should give enough time for drying the film (at least 1-2 days) then you can cut or trim the film.

We do not recommend to cut or trim the film within 1-2 days.

6 – If there are some air bubbles following day, these can be removed by gently warming the film surface with a hair dryer or hot air gun.

(Please be careful that you should have some distance around 30cm away from the film.) Until air bubble is disappeared, wiping it with soft cloth rub and heat.

7 – If any liquid is still remained between the film and the glass, please prick the bubble with a small needle to remove the liquid. Finally clean down the film surface using a soft cloth and liquid glass cleaner.


**NOTE: IT IS ALWAYS RECOMMENDABLE TO MAKE A TEST-INSTALLATION PRIOR TO FINAL INSTALLATION**

**Optea AB®**

**Date of issue: 08-12-2010**

**DocReg Nr: 83-SM-00002-01**

**Attention**  
When  
Installing PET-view  
projection film

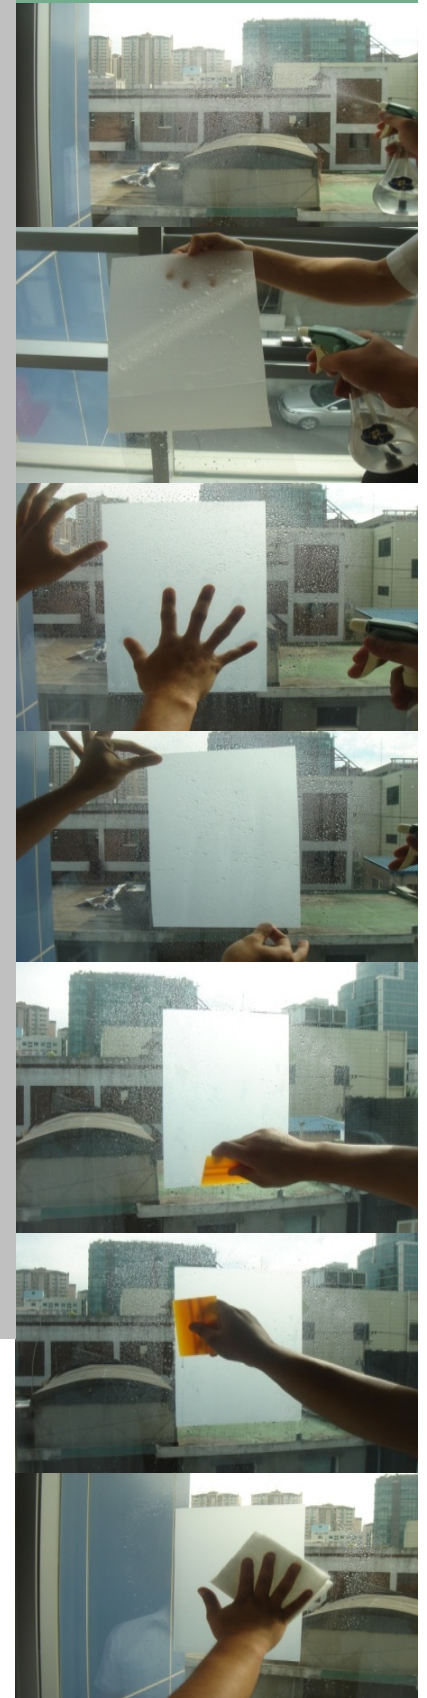

1) Please make sure that the glass or Acrylic surface is clean for the best performance.

2) 1-2 days are necessary for film to be dried out completely.

3) Do not touch it / wear it - too much to keep its high performance.

4) Our Osaka™ projection film screen is not self-adhesive type.  
It has 360° viewing, it is front and rear type projection film screen.  
We recommend to use it with mount frame or something else.

## Considerations

**Optea AB®**  
**Björnnäsvägen 21**  
**S-114 19 Stockholm, Sweden**  
**Phone: +46 8 519 70800**  
**Date of issue: 08-12-2010**  
**DocReg Nr: 83-SM-00002-01**